

CD/VIDEO DISPLAYER ASSEMBLY:
(CDV648 & CDV675)
(BROWSER #893108)

To Assemble:

1. Lay one side on floor or work surface with cam locks up (use cardboard or padding to avoid scratching or marring surface)
2. Align hardware on the back with cam locks in side panel
3. When hardware is aligned, gently insert tabs into cam locks and snug by turning cam clockwise (**DO NOT Over Tighten**)
4. Align bottom stabilizer, following steps 2 and 3
5. Align front panel, following steps 2 and 3
6. Align top shelf with hardware and fasten with bolts (packaged under mat)
7. Gently set opposite side panel and raised ends of back, top and stabilizer, follow steps 2 and 3
8. Stand unit upright and check all cams for snugness
9. Carefully line up and insert drawers

