

Rotor Stand **Assembly Instructions**

1. Remove rotor tower and base from the cartons.
2. Lay the base on its side so the bottom of the base is accessible.
3. Before attaching the rotor tower to the base unscrew the wing nuts from the four bolts on the bottom of the tower.
4. Insert the four bolts on the bottom of the rotor tower into the four holes in the top of the base.
5. Use the four wing nuts to tighten the four bolts on the underside of the base.
6. Once wing nuts are securely tightened stand unit up and make sure tower rotates freely.
7. Screw black decorative cap on top.
8. Repeat procedure for double or quad rotor stands.

