


MOBILE BOOK STORE SHELVING ASSEMBLY INSTRUCTIONS

PARTS: (2) UPRIGHT PANELS, (1) VERTICAL TOP FRAME, (2) MOBILE CARTS, (2) BACK PANELS (OPTIONAL SIGN HOLDER)


HARDWARE: (4) 2-3/4"x1/2" BOLTS (8) 1"x1/2" BOLTS (12) LOCK WASHERS (4) 1-1/4" WASHERS (6) 5/8" SCREWS (OPTIONAL) (2) 1-1/4" SCREWS)

TOOLS: 1/2" SOCKET OR BOX WRENCH - PHILIPS HEAD SCREW DRIVER

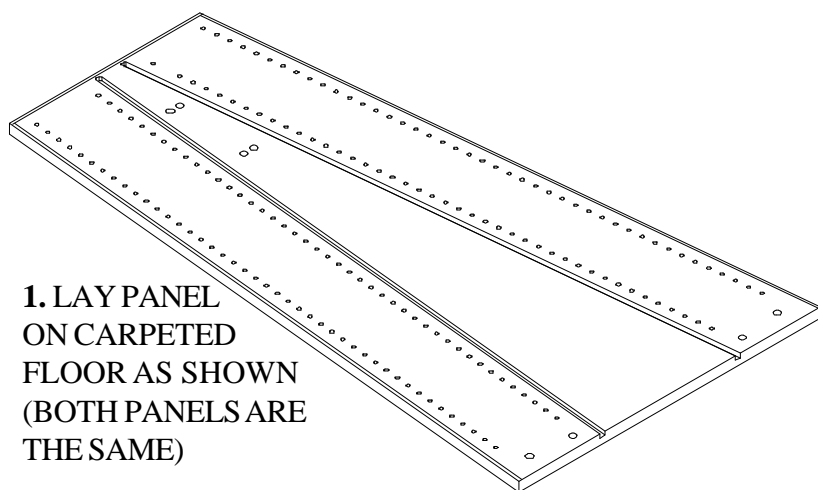

1. LAY PANEL ON CARPETED FLOOR AS SHOWN (BOTH PANELS ARE THE SAME)

DO NOT ATTEMPT TO ASSEMBLE THIS UNIT WITHOUT CONSTANT HELP TO ASSURE PROPER ALIGNMENT AND SAFETY

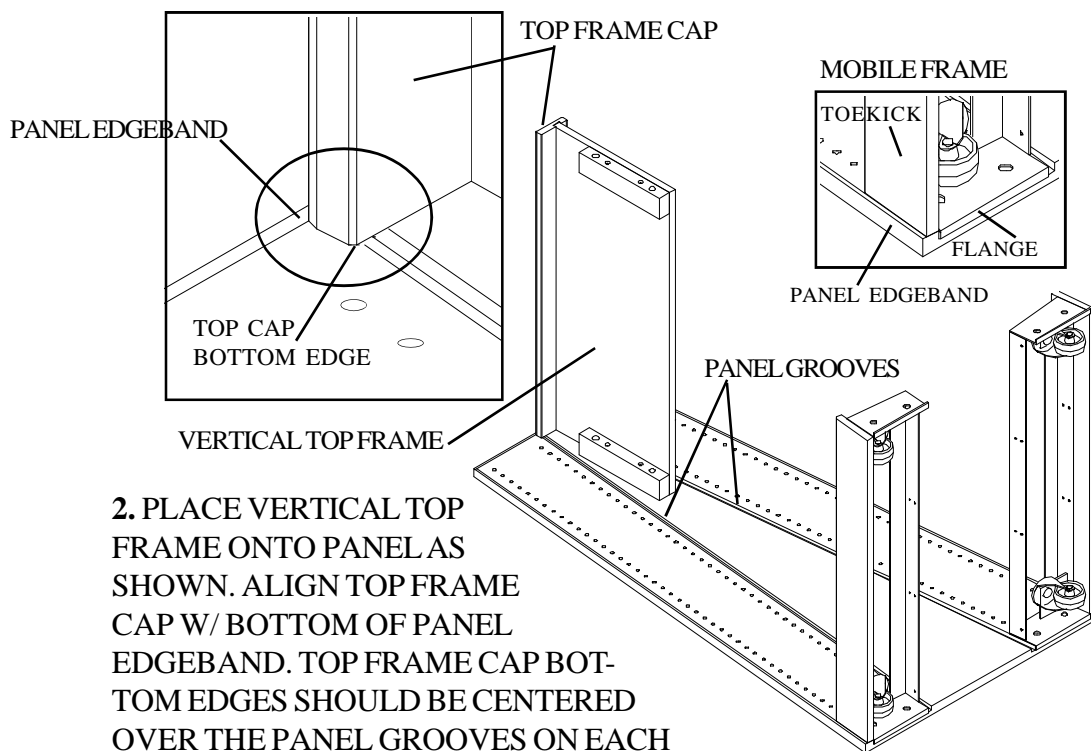




2. PLACE VERTICAL TOP FRAME ONTO PANEL AS SHOWN. ALIGN TOP FRAME CAP W/ BOTTOM OF PANEL EDGE BAND. TOP FRAME CAP BOTTOM EDGES SHOULD BE CENTERED OVER THE PANEL GROOVES ON EACH SIDE. HANDTIGHTEN 2-3/4"x 1/2" BOLT WITH LOCK WASHERS. BEGIN TIGHTENING WITH WRENCH MAKING SURE TOP FRAME CAP STAYS ALIGNED WITH PANEL EDGE BAND & CENTERED OVER PANEL GROOVES ON BOTH SIDES. DO NOT OVER TIGHTEN.

3. PLACE MOBILE FRAME ON PANEL AS SHOWN. FRAME FLANGE SHOULD REST SNUG AGAINST PANEL. ALIGN TOE KICK WITH PANEL EDGE BAND. HAND TIGHTEN 1"-1/2" BOLT WITH LOCK WASHER. BEGIN TIGHTENING WITH WRENCH MAKING SURE FLANGE STAYS SNUG AND TOEKICK REMAINS ALIGNED. DO NOT OVER TIGHTEN.


4. LAY OUT THE SECOND PANEL AS IN STEP ONE. NEVER WITHOUT HELP

- WITH THE VERTICAL TOP FRAME AND TWO MOBILE FRAMES SECURELY FASTENED GENTLY TURN THE FIRST ASSEMBLY ONTO THE SECOND PANEL AS SHOWN AND ALIGN THE

VERTICAL TOP CAP ALONG EDGE BAND AND CENTERED OVER PANEL GROOVES AS BEFORE. HAND TIGHTEN, CHECK ALIGNMENT BEFORE AND DURING TIGHTENING WITH WRENCH. DO NOT OVER TIGHTEN. ALIGN TOE KICKS AS BEFORE MAKING SURE FLANGE IS SNUG. HANDTIGHTEN, CHECK ALIGNMENT BEFORE AND DURING TIGHTENING WITH WRENCH. DO NOT OVER TIGHTEN.

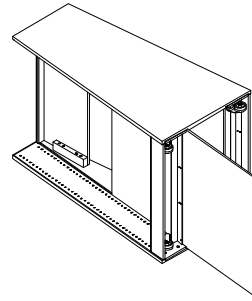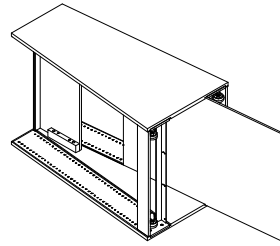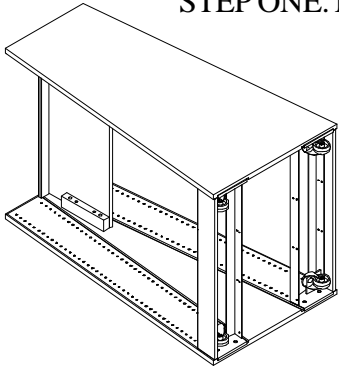


5. GENTLY SLIDE BACKS INTO PANEL GROOVES COMPLETELY INTO THE PANEL UNTIL IT REACHES THE BOTTOM OF THE TOP FRAME CAP.

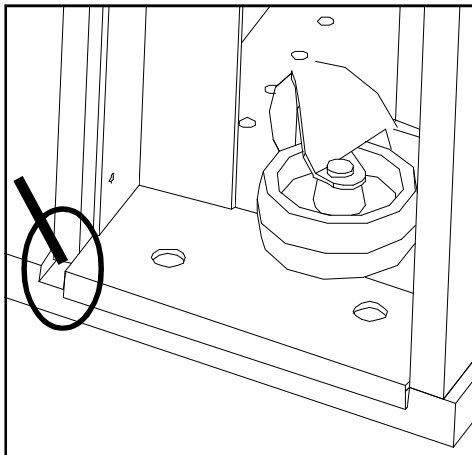


6. IMPORTANT! TWO PERSON STEP. AS ONE PERSON PUSHES THE BOTTOM OF THE BACK TIGHT AGAINST THE TOP FRAME CAP, SCREW (1) SMALL WOOD SCREW AT AN ANGLE (TOESCREW) IMMEDIATELY NEXT TO THE BACK INTO THE PANEL SO THAT THE BACK WILL REMAIN IN PLACE. REPEAT FOR OTHER BACK. DO NOT TURN UNIT OVER YET.

7. BEFORE REPEATING STEP 6 AND THIS STEP ON OTHER SIDE - STILL WHILE ONE PERSON PUSHES THE BOTTOM OF THE BACK TIGHT AGAINST THE TOP CAP AND NOW THE MOBILE FRAME - SCREW (2) SCREWS THROUGH THE HOLES IN THE MOBILE FRAME INTO THE BACK AS SHOWN BELOW.

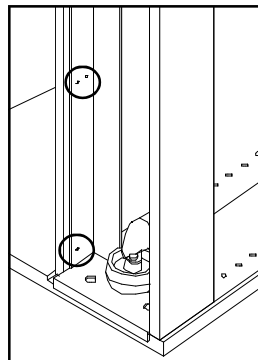

8. CAREFULLY TURN THE UNIT ONTO THE OTHER PANEL AND REPEAT EXACTLY STEP SIX AND THEN SEVEN.

9. TWO PEOPLE TURN UNIT UPRIGHT. PLACE BOTTOM SHELVES IN FRONT EDGE FIRST PRESSING GENTLY DOWN IN THE BACK. PLACE PINS SMOOTH END INTO HOLE. (OPTIONAL SIGN HOLDER, CENTER ON TOP FRAME CAP, WHILE BEING HELD FIRMLY IN PLACE. SCREW THROUGH HOLES IN HOLDER INTO TOP CAP. FOR BEST RESULTS MARK AND DRILL PILOT HOLES IN TOP CAP BEFORE FASTENING HOLDER.

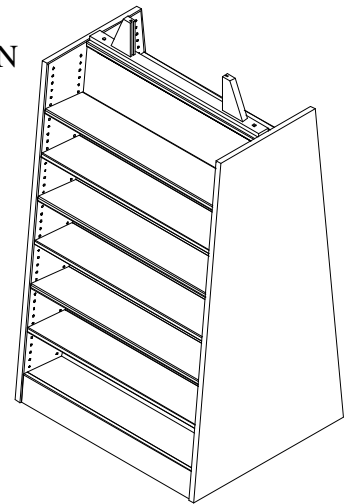

demco
imagine what's possible™

Find Gaylord® Americana® Mobile Bookstore Shelving Display Unit @demco.com
Search: 2051927

Call 800.962.4463 or email custserv@demco.com