

Gear Guard™ Mobile STEM Workstation Assembly Instructions



Parts List:

- | | |
|-------------------------------|---|
| (1) Base with Casters and Rim | (1) Tabletop |
| (1) Center Shelf with Rim | (28) Bolts |
| (2) Gear Guard Panels | (20) Wood Dowels |
| (2) End Panels | Tools required: Allen Wrench — included |

WARNING:
CHOKING HAZARD — Assembly hardware contains small parts. Adult assembly required.

Assembly tips: Assemble the workstation on a tarp or piece of cardboard to protect against scratches. Rubbing bar soap on the Bolts will lubricate the threads for easier assembly.

Position the Center Shelf, Tabletop, and Gear Guard Panels

- Lay one End Panel flat on the floor as shown in fig. 1. Place (8) Dowels in the face of the panel — see fig. 1 for locations.
- Position the Center Shelf as shown in fig. 2. Pivot the shelf vertically onto its left edge. Press over the Center Shelf Dowels in the End Panel (see fig. 1). The Dowels should hold the shelf in place.
- Position the Tabletop as shown in fig. 3. Pivot the Tabletop vertically onto its left edge. Press over the Tabletop Dowels in the End Panel. The Dowels should hold the Tabletop in place.
- Position the Gear Guard Panels as shown in fig. 4. Pivot one panel vertically onto its left edge. Press over the Gear Guard Dowels in the front edge of the End Panel. Pivot the remaining Gear Guard Panel onto its right edge. Press over the Gear Guard Dowels in the back edge of the End Panel. The Dowels should hold the panels in place.

Attach the second End Panel

- Place (8) Dowels in the exposed ends of the Center Shelf, Tabletop, and Gear Guard Panels — see fig. 2–4 for locations.
- Position the remaining End Panel as shown in fig. 5. Press the panel over the Dowels with the outer side facing up.
- Using the Allen Wrench, screw (8) Bolts through the outside of the End Panel — see fig. 5 for locations. Do not tighten fully.

Attach the Gear Guard Panels

- Using the Allen Wrench, screw (6) Bolts through the Gear Guard Panels — see fig. 4 for locations. Do not tighten fully.

Fasten the unsecured End Panel

- Pivot the workstation to the left and onto its top — be careful to keep the unsecured End Panel in place as you pivot.
- Using the Allen Wrench, screw (8) Bolts through the outside of the End Panel — see fig. 5 for locations. Do not tighten fully.

Attach the Base

- Insert (4) Dowels in the exposed edges of the End Panels — see fig. 1 for locations.
- Position the Base as shown in fig. 6. Press the Base over the Dowels with the casters facing up. Be sure to align the rim with the back of the workstation. Using the Allen Wrench, fully tighten (6) Bolts through the Base — see fig. 6 for locations.


Complete Assembly

- Use the Allen Wrench to fully tighten all bolts in the End Panels and Gear Guard Panels. Lock the casters and pivot the workstation onto its base to complete assembly.



Gear Guard™ Mobile STEM Workstation Parts Guide

End Panel Inner Side (fig. 1)

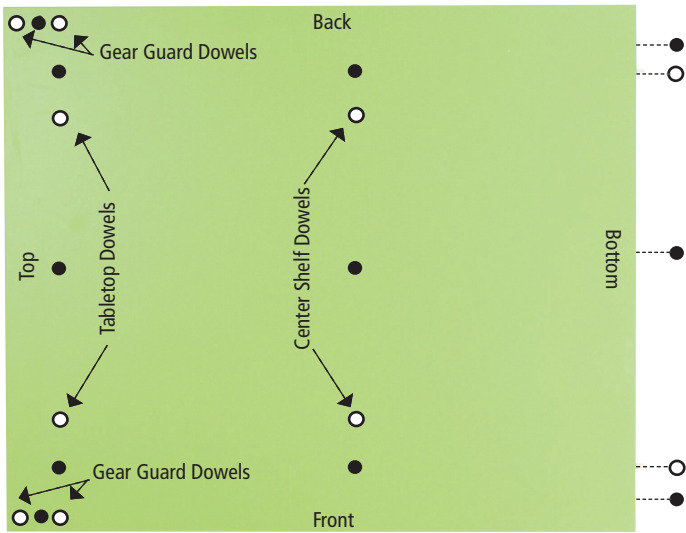


Center Shelf (fig. 2)





Tabletop (fig. 3)



End Panel Outer Side (fig. 5)

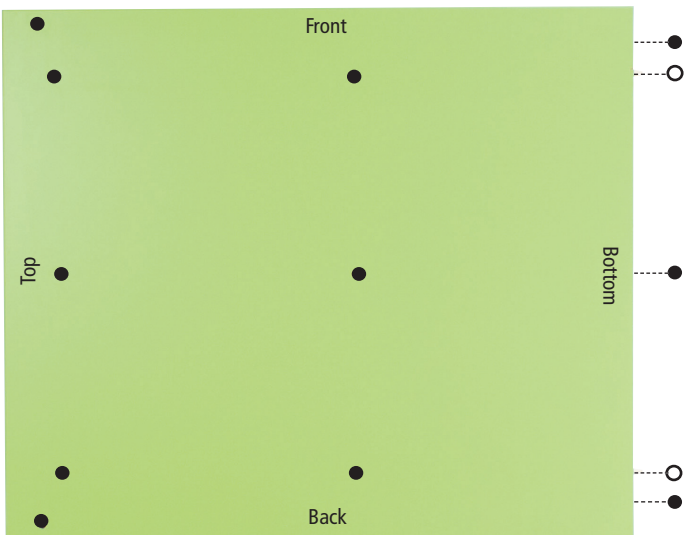

2" H Gear Guard Panel (fig. 4)

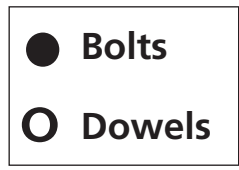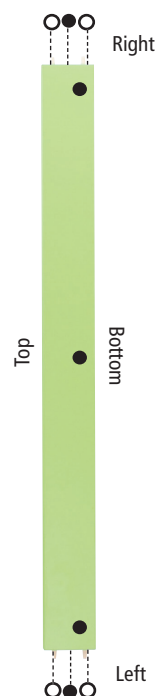

Base Underside (fig. 6)

