MATRIX TABLE

HPFi

High Point, USA

Assembly Instructions

Tools needed:


- Powered screwdriver
- #2 Square head bit
- Level
- ³/₈" Open ended wrench


Hardware included:

- (8) -1" Washer head wood screws
- (8) 1 ³/₄" Washer head wood screws
- 1. Carefully open and inspect all product. If any damage is evident retain packaging and contact your Customer Service Representative immediately.




2. Place work surface face down on a protected surface. Position bases on end of table so the inside vertical panels of the bases make contact with the apron rail. Secure with included 1" wood screws

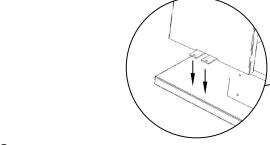

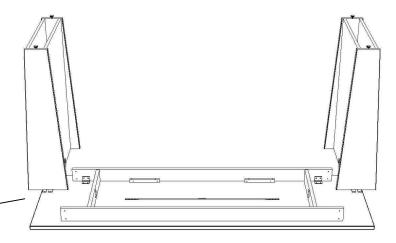

3. Once bases are securely fastened to the work surface use included 1 3/4" wood screws to fasten the the bases to the table apron.

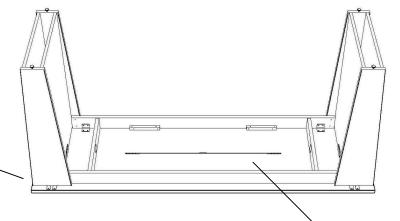

4. With bases secured in place, using at least 2 people, turn table upright and level as needed.



NOTE. Matrix tables of 8' in length come with an installed sag prevention bar. In the case that your table shows noticeable sag along the work surface, use a $\frac{3}{8}$ " open faced wrench to tighten the sag nut to remove visible sag.

