




Demco LibraCraft Mobile Wood Shelving Assembly Instructions

*2-1/2" Screws are for screwing through the holes in the top frame blocks and into the upright panels



1. Lay out top frame and uprights as shown. Align top frame with upright side edgeband.

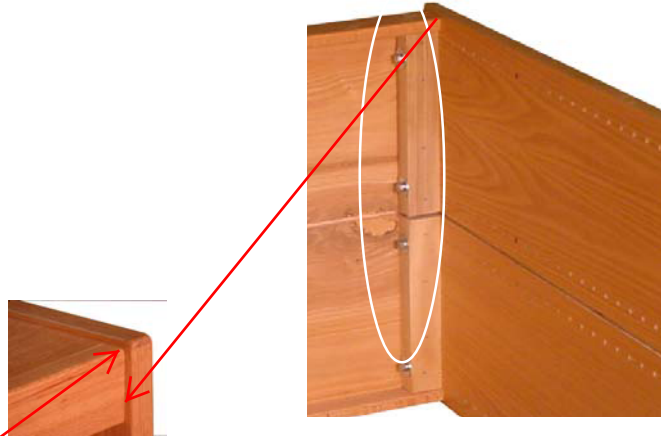

2. Fasten top frame to uprights as shown
Align top frame with upright top edgeband.



3. Turn unit onto top frame as shown



4. Slide partition into groove of uprights...

Put casters on after frame is fastened to uprights.



5. ...and down into the groove on the top frame.



6. Place Titan frame onto uprights as shown. Align bolt holes, fasten securely.



7. Turn unit up onto its casters and place bottom shelves in first as shown.



8. Insert shelf pins into shelf uprights fully.



HARDWARE BAGS

STARTERS: (8) 2-3/4" BOLTS W/LARGE WASHERS (FOR TOPS)

(8) 1" BOLTS W/SM WASHERS/LOCK WASHERS ON BOLT FIRST (FOR CARTS)

ADDERS: (4) 5-1/2" W/WASHER AND T-NUT (FOR TOPS)

(4) 2" W/SMALL WASHERS & LOCK WASHERS WITH NUT (FOR CARTS)



Find Demco LibraCraft Mobile Wood Shelving @demco.com

Search: **Demco LibraCraft Mobile Wood Shelving**

Call 800.962.4463 or email custserv@demco.com