




ASSEMBLY INSTRUCTIONS: STANDING WORK CONSOLE (SWC)

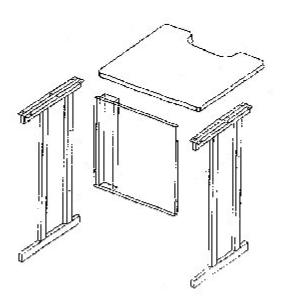

HARDWARE		
QUANTITY	PART NUMBER	DESCRIPTION
4	1010530	FLOOR GLIDE
4	1010550	1/4-20 LOCKNUT
12	1010555	10/32 X ½" MACHINE SCREW
4	1010566	1/4-20 X 1 3/4" MACHINE SCREW

INSTRUCTIONS

- 1. Lay top upside down on a clean, scratch free surface. Position top with cut out to the rear.
- 2. Take leg uprights with long side of leg base facing you and screw into top inserts using $10/32 \times \frac{1}{2}$ " machine screws until secure.
- 3. Determine which side chase is desired. Then, place modesty panel with chase to the back between leg uprights and align with holes in the leg. Secure with $\frac{1}{4}$ -20 x 1 $\frac{3}{4}$ " machine screws and $\frac{1}{4}$ -20 locknuts.
- 4. Tighten screws in leg support frame.
- 5. Insert floor glides into bottom of each leg.
- 6. Turn the table upright.

