


If you require assistance during assembly, our Customer Service team can help you!

Email custserv@demco.com or call 800.356.1200



ASSEMBLY INSTRUCTIONS FOR CHROME LUNCHROOM TABLES

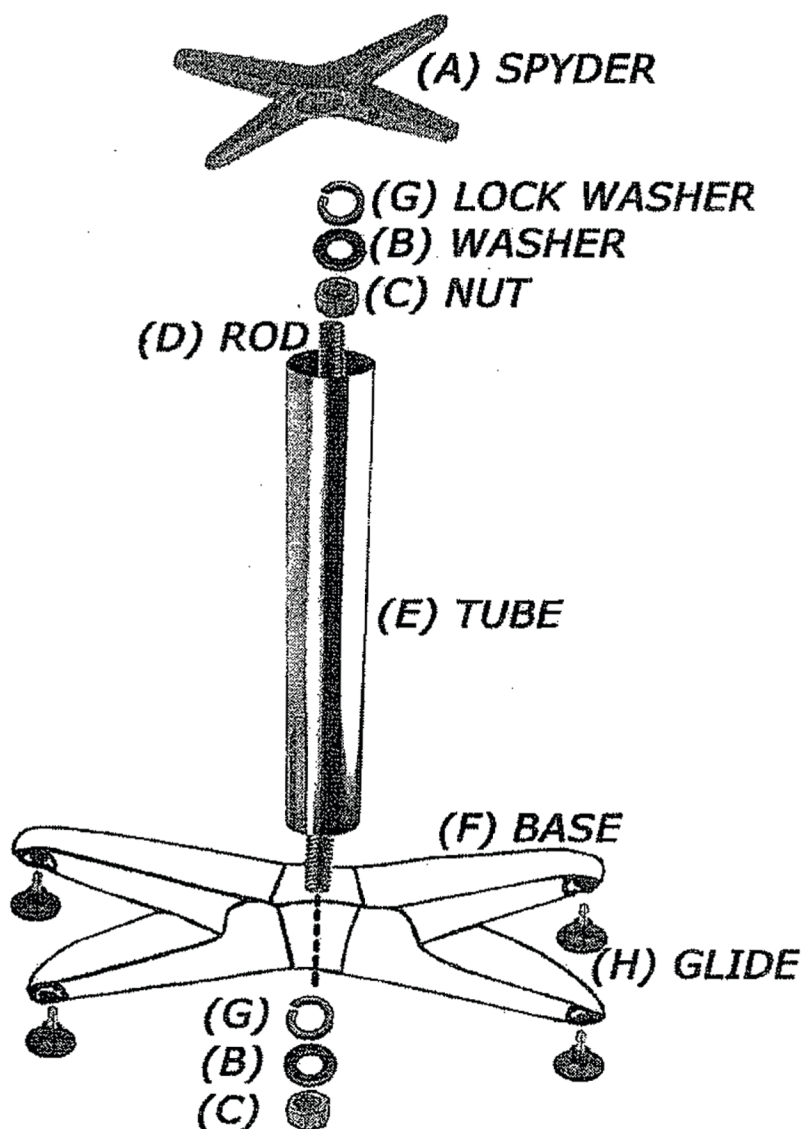

1. THREAD ON ONE NUT (C) ONTO END OF ROD (D). THEN PLACE WASHER (B) OVER NUT. THEN LOCK WASHER (G) OVER WASHER (B).
2. THREAD ROD ASSEMBLY ONTO "SPYDER" (A) MAKING SURE "SPYDER" HAS THE SIDE WITH TUBE (E) SLOT FACING ROD. ROD SHOULD ONLY BE THREADED UNTIL FLUSH WITH OPPOSITE SIDE OF "SPYDER".
3. TIGHTEN NUT TO "SPYDER" USING 17 MM (1/16) SOCKET OR WRENCH.
4. SET ASSEMBLY ON THE FLOOR "SPYDER" SIDE DOWN AND ROD POINTING UP. PLACE TUBE (E) OVER ROD (D) SO IT FITS IN THE TUBE SLOT.
5. PLACE BASE (F) OVER TUBE AND ROD.
6. PUT ON LOCK WASHER (G) THEN WASHER (B) THEN THREAD ON NUT (C). TIGHTEN NUT.
7. PLACE TABLE TOP FACE DOWN ON THE FLOOR SO HOLE IN CENTER IS SHOWING.
8. CENTER PEDESTAL ASSEMBLY ON TABLE AND FASTEN WITH THE SCREWS PROVIDED.
9. THREAD ON GLIDES (H). FLIP OVER THE TABLE AND LEVEL USING GLIDES.