



Form# 179739 02/2013


Hardware and Components

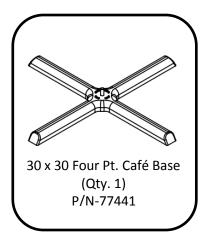

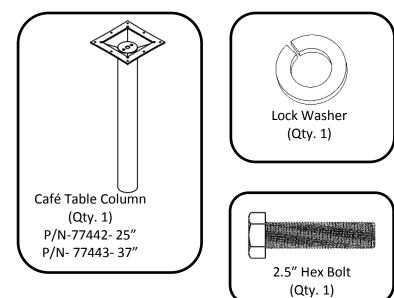


Assembly Instructions

Step 1: Use the 8 screws included with the top to attach the top to the column. 8 holes are pre-drilled in the top. For easier assembly, use an electric drill at a low torque setting.

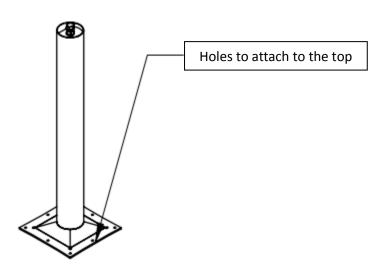



Step 2: Unscrew and remove the hex bolt and the lock washer from the column section.

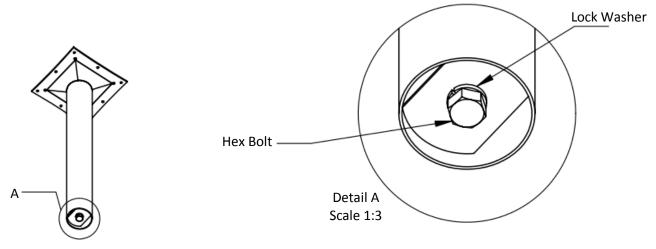

Step 3: Turn the Column upside down. Locate the column around the circular protrusions on the base. Reattach the lock washer and hex bolt.

Step 4: Optional: Use a $\frac{3}{4}$ " socket wrench to tighten the hex bolt.

