

SPACING TAPE INSTRUCTIONS

1. Using scotch tape position the spacing tape and secure both ends. Adjust the spacing tape with a level if possible, making sure it is straight. Secure with the rest of the spacing tape with additional tape to prevent movement.
2. Use the top edge of the spacing tape for the baseline of the letters.
3. Mount letters on the background surface according to spacing designated on tape.
4. Remove the spacing tape after installation is complete

EXAMPLE

Brackets enclose a letter:



“Tick” marks indicate where a letter drops below the baseline:


NON BASELINE STYLES:

Note: Rounded letters are designed to be slightly larger overall. Therefore they will extend below the baseline. Proper alignment will be indicated on the spacing tape.

demco® imagine what's possible™

If you require assistance during assembly, our Customer Service team can help you!

Email custserv@demco.com or call 800.356.1200.

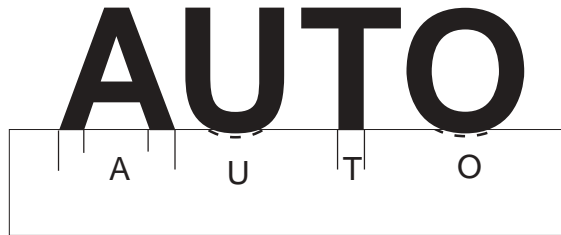

demco®
imagine what's possible™